

## 2003 GX 470



The digital clock indicates the time when the key is in the "ACC" or "ON" position.

To reset the time, push and hold the "MODE" button for 2 seconds. "ILL" will appear on the display. Then push the "MODE" button once. The time will blink.

To reset the hour – Push the "▼" button.

To reset the minutes – Push the "▲" button.

To adjust the time to the nearest hour, push the "RESET" button. For example, if the "RESET" button is depressed when the time is between 1:01 – 1:29, the time will change to 1:00. If the time is between 1:30 – 1:59, the time will change to 2:00.

If the electric power source has been disconnected, the time display will automatically be set to 1:00.