

# 2008-2009 IS



---

■ **The clock is displayed when**

The "ENGINE START STOP" switch is in ACCESSORY or IGNITION ON mode.