

2008-2009 LS 460

The clock is displayed when the "ENGINE START STOP" switch is in ACCESSORY or IGNITION ON mode. Perform the following steps to adjust the clock.

► Without touch screen (without navigation system)



1 Adjusts the hour.

2 Adjusts the minutes.

3 Rounds to the nearest hour.*

*: e.g. 1:00 to 1:29 → 1:00

1:30 to 1:59 → 2:00

► With touch screen (without navigation system)



STEP 1



Press "INFO".

STEP 2 Touch **Adjust Clock**.



- 1** Adjusts the hour.
- 2** Adjusts the minutes.
- 3** Rounds to the nearest hour.*
- 4** Turns daylight saving time on.
- 5** Turns daylight saving time off.

After setting, touch **OK**.

*: e.g. 1:00 to 1:29 → 1:00
1:30 to 1:59 → 2:00

- ▶ With touch screen (with navigation system)
Refer to "Navigation System Owner's Manual."