


2007 LX 470

■ Adjust clock

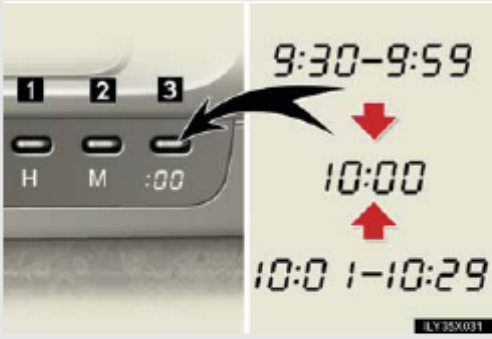

1 Adjust hours.
2 Adjust minutes.
3 Round the nearest hour.*
*: e.g. 1:00 to 1:29 → 1:00
1:30 to 1:59 → 2:00

LY95X031

■ The clock is displayed when

The ignition key is in the "ACC" or "ON" position.

■ When the battery is disconnected

The time display will automatically be set to 1:00.