



- ▶ **1** 12-hour display mode
- 2** 24-hour display mode
- 3** Time setting mode (indication blinking)
- 4** Alarm setting mode (indication blinking)

The digital clock indicates the time with the ignition key at the “ACC” or “ON” position. The mode can be changed by pushing the “CLOCK” button on the audio control panel.

With the tail lights on, the brightness of the time indication will be reduced.

If the electrical power source has been disconnected from the clock, the time display will automatically be set to 1:00 (one o'clock).



▶ **Adjusting the time:**

1. Push the “CLOCK” button to enter the time setting mode.
2. Push the “H” or “M” button to adjust the time.
3. Push the “CLOCK” button again.

To set the clock by the radio, adjust the minute to “00” at step 2. and push the “CLOCK” button by the time signal from the radio.

▶ **Setting the alarm:**

1. Push the “CLOCK” button to display the alarm setting mode.
2. Input the time you want to sound an alarm by pushing “H” or “M” button.
3. Push the button indicated by the “bell” mark. The bell indicator appears.

An alarm sounds for about 20 seconds at the set time every day. To stop the alarm, push the “CLOCK” button.