



The clock can be corrected manually or by using signals from the GPS. Daylight Saving Time setting or your desired time setting is available.



Push the "CLOCK" button to display the "Adjust Clock" screen.

- To adjust a clock automatically



Before you use the auto adjust function, select the time zone (see "Time Zone" described below). Touch the "ON" switch of "Auto Adjust". The time is automatically adjusted by the GPS clock.

"Time Zone": You can select the time zone. When you touch this switch, the display will be change to the time zone selection screen. The initial setting is "Eastern".



Touch the switch of your desired area. The time zone for the area is set and the previous screen returns.

"Others": You can adjust the time zone manually with "▲", "▼" switches.



- To adjust a clock manually



Touch the "OFF" switch of "Auto Adjust". You can adjust the clock manually with "H", "M" and ":00" switches.

"H": To set the hour.

"M": To set the minute.

":00": To adjust the time to the nearest hour, touch this switch.

- To set daylight saving time



"Daylight Saving Time": You can set or cancel the daylight saving time.

To set the daylight saving time touch the "ON" switch, to cancel it touch the "OFF" switch.