

Beep setting

You can set a beep sound off.



1. Push the "INFO" button.



2. Touch "Beep Off".

"Beep Off" is highlighted.

To switch the beep sound on, touch "Beep Off" again.

Clock adjustment



The clock can be corrected manually or by using signals from the GPS. Daylight Saving Time setting or your desired time setting is available.



1. Push the "INFO" button.



2. Touch "Adjust Clock".


OTHER FUNCTIONS

- To adjust a clock automatically




Before you use the auto adjust function, select the time zone (see “Time Zone” described below). Touch “ON” of “Auto Adjust”. The time is automatically adjusted by the GPS clock.

“**Time Zone**”: You can select the time zone. When you touch this touch-screen button, the display will be change to the time zone selection screen. The initial setting is “Eastern”.

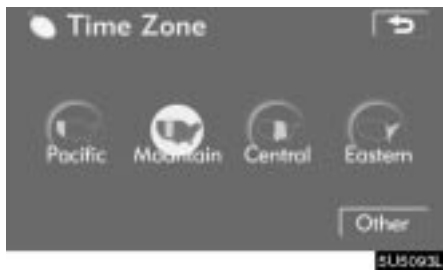

Touch the touch-screen button of your desired area. The time zone for the area is set and the previous screen returns.

“**Other**”: You can adjust the time zone manually with ▲, ▼.

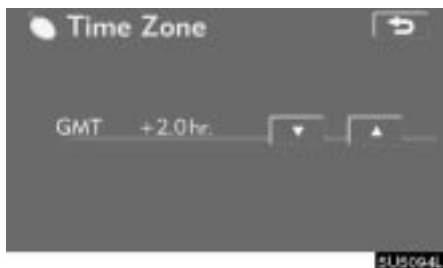

- To adjust a clock manually



Touch “OFF” of “Auto Adjust”.

You can adjust the clock manually with “H”, “M” and “:00”.

“H”: To set the hour.

“M”: To set the minute.

“:00”: To adjust the time to the nearest hour, touch this button.

- To set daylight saving time




“Daylight Saving Time”: You can set or cancel the daylight saving time. To set the daylight saving time touch “ON”, to cancel it touch “OFF”.

Selecting a language

The language of the touch-screen buttons, pop-up messages and the voice guidance can be changed.



1. Push the “INFO” button.

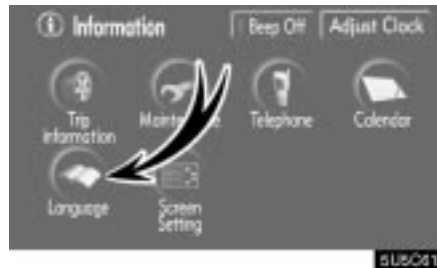

2. Touch “Language”.