2008-2009 LS 460 w/ Navigation

The clock can be corrected manually or by using signals from the GPS. Daylight Saving Time setting or your desired time setting is available.

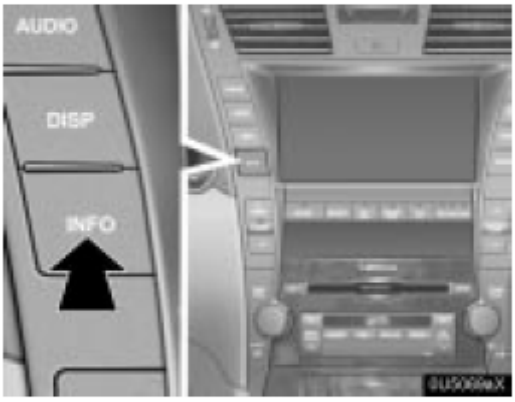

1. **Push the "INFO" button.**

2. **Touch "Adjust Clock".**

- **To adjust a clock automatically**

Before you use the auto adjust function, select the time zone (see "Time Zone" described below). Touch **"ON"** of "Auto Adjust". The time is automatically adjusted by the GPS clock.

"Time Zone": You can select the time zone. When you touch this touch-screen button, the display will be change to the time zone selection screen. The initial setting is "Eastern".

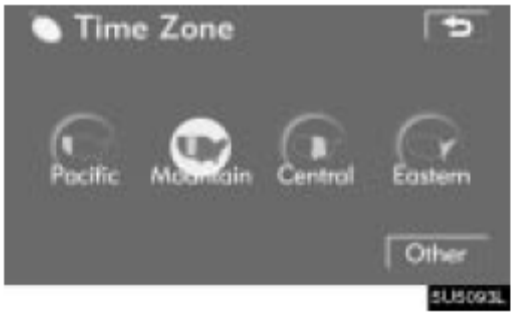

Touch the touch-screen button of your desired area. The time zone for the area is set and the previous screen returns.

"Other": You can adjust the time zone manually with ▲, ▼.

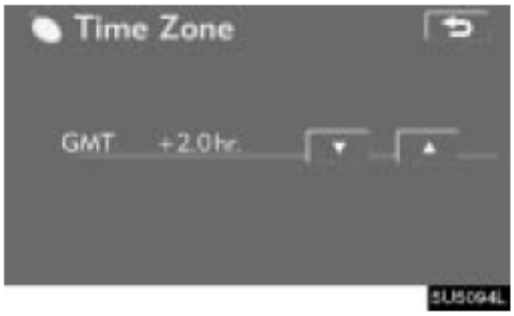

- **To adjust a clock manually**

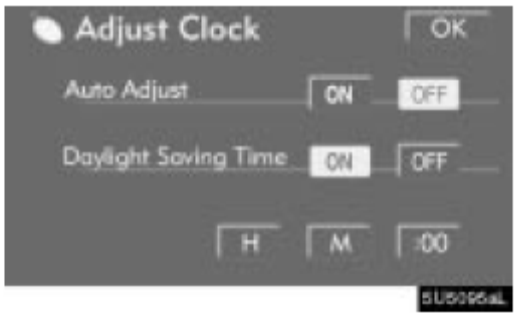

Touch **"OFF"** of "Auto Adjust".

You can adjust the clock manually with **"H"**, **"M"** and **":00"**.

"H": To set the hour.

"M": To set the minute.

":00": To adjust the time to the nearest hour, touch this touch-screen button.

- **To set daylight saving time**

"Daylight Saving Time": You can set or cancel the daylight saving time.

To set the daylight saving time touch **"ON"**, to cancel it touch **"OFF"**.